



E-BIKE USER MANUAL





CONTENTS

Attention	01
Safety Precautions	02
Product Information	05
Assembly Instructions	07
Battery and Charger	19
Brakes/Shock Absorption	20
LCD Odometer & Instructions	21
Ebike Care Guide	31
Safety Checklist	32
Troubleshooting	33
Disclaimer	34



Attention

This manual contains details of the product, information on its operation and maintenance, safety notes, and other helpful tips for owners. All users must read it carefully and familiarize themselves with the below-mentioned information before using the product to ensure safe use and prevent tragic accidents. Failure to review this information may lead to injuries or death.

Make sure to read all provided component manuals along with this Ebike manual before use. Make sure to retain this manual along with any other documents included with your Ebike for future reference.

As it is impossible to anticipate every situation or condition which can occur while riding, this manual makes no representations about the safe use of Ebike under all conditions. Therefore, unforeseen risks associated with the usage of any Ebike are the sole responsibility of the rider.

All content in this manual is subject to change or withdrawal without notice. QRONGE makes every effort to ensure the accuracy of its documentation and assumes no responsibility or liability if any errors or inaccuracies appear within.



Notice

Initial assembly and adjustment of your Ebike may be challenging and should be assembled with two people. Pay special attention to areas marked by this Caution Symbol and all information in this manual beginning with NOTICE.

As a parent or guardian, you are responsible for the activities and the safety of your children. The Cruiser is not designed for use by children.

The maximum design speed of this electric bicycle does not exceed 25 km/h.





Safety Precautions

1. Failure to confirm proper installation compatibility, proper operation, or maintenance of any component or accessory can result in serious injury or death.
2. Before riding, please ensure the Ebike is a proper fit. You may lose control or fall if your Ebike is too big or too small.
3. Make sure all screws are tight and your Ebike is set up correctly before riding and conduct regular check-ups.
4. Always wear a helmet. Helmets significantly reduce the number of head injuries. Practice safety rules that comply with your state laws when riding your QRONGE Ebike. Riding without a helmet may result in injuries or death.
5. Make yourself more visible by wearing bright reflective clothing. Keep your reflectors clean and properly aligned. Use head and tail lights when visibility is reduced.
6. Wear sturdy shoes and eye protection. Check your state laws concerning other protective gear that may be required when riding your QRONGE Ebike.
7. Ebikes are heavier and faster than ordinary bicycles, please be extra careful when riding.
8. Ride slowly until you are familiar with the riding conditions. Never ride faster than conditions warrant or beyond your riding abilities.
9. Alcohol, drugs, fatigue, and inattention can significantly reduce your ability to make good judgments and ride safely.
10. Keep your Ebike in safe conditions, inspect and maintain your E-Bike regularly to ensure a longer product life for your QRONGE E-Bike. Follow the safety checklist on page 31 in this manual.

-
- 11.** Ensure handlebar grips are not damaged and are properly installed. Loose or damaged grips can cause you to lose control and fall down.
 - 12.** Check the operation of the brake suppressor switch before each ride. The brake system is equipped with a suppressor that shuts off the power to the motor whenever the brake is engaged. Check the correct operation of the brakes before riding the Ebike.
 - 13.** Understand the operation of the power button and pedal assist sensors before use to ensure that you ride at a speed appropriate for the area and the user's experience level during use.
 - 14.** Failure to properly charge, store or use your battery will void the warranty and may cause dangerous situations.
 - 15.** Be extra careful when riding in wet conditions. Feet or hands may slip and fall in damp environments, resulting in death or serious injury due to the fall.
 - 16.** After any incident, do not ride your Ebike until you consult with a certified Ebike mechanic for a comprehensive inspection.
-

-
- 17.** Ebike and Ebike parts have strength and integrity limitations. Extreme riding should not be performed or you risk damaging the components or becoming seriously injured or killed.
 - 18.** Do not ride this bike in any ways other than the intended purpose or you can be seriously injured or killed.
 - 19.** Off-road riding requires close attention and specific skills. Please be aware of variable conditions and hazards.
 - 20.** Wear appropriate safety gear and do not ride alone in remote areas. Check local rules and regulations if off-road riding is allowed.

-
- 21.** This product can only be used with a QRONGE bike trailers, stands, or bike racks. Contact QRONGE to check if your equipment will work with the Ebike. Any service changes to your QRONGE Ebike that are not expressly approved by QRONGE may invalidate the warranty and cause an unsafe riding experience.
 - 22.** It is your responsibility to familiarize yourself with the laws and requirements of the operation of this product in the areas where you ride.
 - 23.** Ensure that you comprehend all instructions and safety notices/warnings.

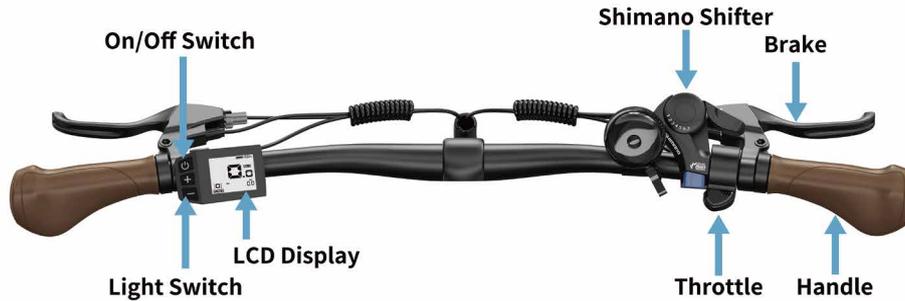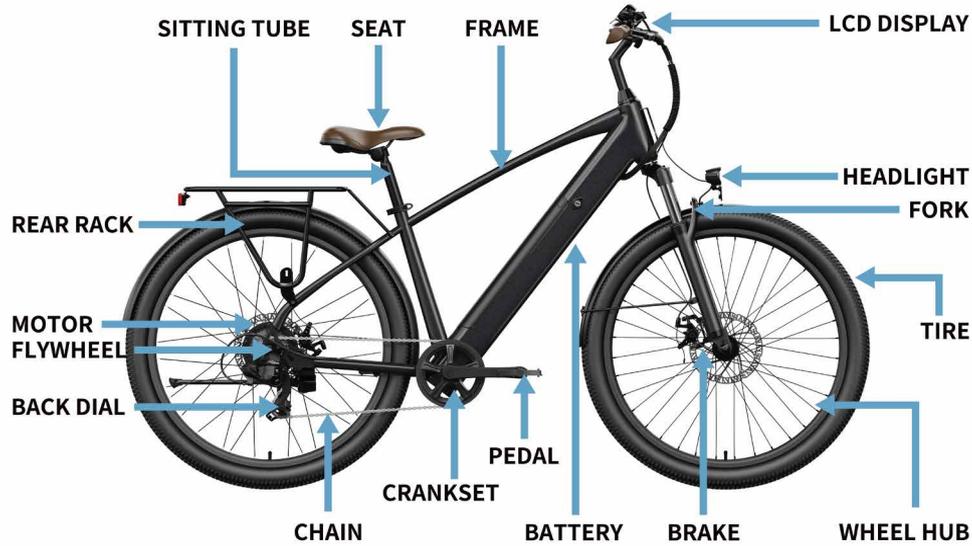



Assembly Instructions



Notice

The following assembly steps are only a general guide to assist in the assembly of your QRONGE Ebike and are not a complete or comprehensive manual of all aspects of assembly, maintenance, and repair.

We recommend you consult a certified Ebike mechanic for repair and maintenance of your Ebike.

For detailed instructions, please view the QRONGE Ebike assembly video at www.QRONGE.com

Step 1: REMOVE PACKAGING

Gather necessary tools.

Unpack the QRONGE electric bicycle and accessories.

*Makes sure ALL parts shown above are included.



Step 2: HANDLEBAR ASSEMBLY



Remove the fork protection parts and keep the bike upright.



Find this Bowl Group Cover and put it on the bike in the correct orientation.



Align the lower end of the bike tap with the Bowl Group Cover and slowly place it into the Bowl Group Cover.



Reorientation of the bicycle tap.



Adjust the direction of the bicycle tap, please note the maximum scale where the arrow points to, please do not exceed the scale for the safety of the frame.



Use the supplied multi-function screwdriver and twist the tool in a clockwise direction, ensuring that the head of the handlebar is oriented perpendicular to the body.



Adjust the elasticity to match your ride.

Step 3: Front Wheel Installation



Remove the front fork protection component



Mount the wheel to the fork as shown in the picture



Install screws and washers.



Put the spacer back in and tighten the screws on both sides, installation completed.



Check The Shock absorption function is for absorbing shocks and is adjustable by the switch according to your preferences. Increase the shock absorption intensity on uneven roads or hillsides to reduce shock, and vice versa.

Step 4: Front Wheel Assembly



Find this front mudguard.



Insert the Mudguard from the front to the rear of the car as shown. NOTE: Gently hold the parts marked with a blue circle in your hand to ensure there is enough room!



Attach the mudguard to the fork as shown in the picture and fix it clockwise with a multifunction screwdriver.

Step 5: Headlight and Mudguard fixings



Connect the wires from the headlight to the positions pointed out by the arrows.



Attachment of the headlight, front mudguard, and front body of the bike by means of a multifunction screwdriver.

Step 6: Installation of footrests



Find the correct pedal, 'L' for left foot pedal and 'R' for right foot pedal.



Slow mounting of the footrest with a multifunction screwdriver.

Step 7: Rear Rack Assembly



Find this Rear Rack and 4 screws.



Tighten the four joints of the Rear Rack with screws clockwise in the position as shown.

Step 8: Bicycle tail light installation



Align the taillight at the Rear Rack's screw holes.



Tighten the rear tail light with a tool.



To avoid messing up the rear light wires, please use the supplied cable ties to tie the wires to the bike as shown in the picture.


Step 9: Bike Seat Installation



Find this bike seat.



Slow and logical mounting of the seat into the body of the bike.

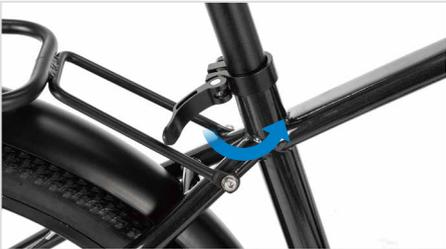

After ensuring the appropriate height, fix the safety lock of the vehicle.



Please be careful not to exceed the maximum scale, as this will harm the life of the bike.

Step 10: Battery Installation and Removal



Gently twist the key and lift the battery out gently by hand.



Place the underside of the battery first as shown in the picture, then press lightly to fit the battery into the body.



Battery and Charger

BATTERY CHARGING TIME:

A single full charge will take 5.5 to 6.5 hours.

CHARGING METHODS:



A. Recharge the battery on E-Bike directly.

Or



B. Remove battery from the E-Bike and recharge separately.



Brakes / Shock Absorption

Your QRONGE E-bike is equipped with mechanical brakes for maximum reliability.

Applying pressure to the brake lever creates friction between the wheel brake and the brake disc, slowing the wheel. To stop faster, apply more pressure to the brake lever.

It is important to know how brake levers control the front and rear brakes. The left brake lever controls the front brake and the right brake lever controls the rear brake.

The rear brake should always be applied before and while the front brake is applied. Applying only the front brake to slow or stop at high speeds may result in the rider being ejected from the saddle and injuries from fall. It is best to apply even pressure to both brake levers when slowing or stopping.

Ebikes equipped with disc brakes will occasionally make a slight scraping noise when the wheels are turning without the brakes being applied. This is normal.

Make sure that the brake lever does not touch the handlebar when full hand pressure is applied (Figure 1). If so, then the brakes must be adjusted by increasing the tension on the cable.

A quick adjustment may be made by screwing or unscrewing the threaded barrel adjuster on the brake lever until the brakes are fine-tuned for safe stopping (Figure 2). If the brakes are still not operating correctly, they may require further adjustment by an experienced bicycle mechanic.



Figure 1



Figure 2



WARNING

1. Disc brake rotors may become hot during usage. Do not touch the disc rotor shortly after use.
2. Wet weather conditions will cause slipping and require a longer distance to stop. Brake earlier and avoid sudden stops when riding in wet conditions.



LCD Odometer & Instructions

Appearance and Size




Buttons Description

Button	Name	Function
	【Power】	1.Power on/off 2.Confirmation
+	【+】	1.Parameters Adjustment 2.Light on/off 3.Menu Operations
-	【-】	1.Parameters Adjustment 2.Push Assist Starts/Shuts 3.Menu Operations

Operation

★Power on/off


Press and hold **Power** for 2s to power on, and the logo interface will be shown for 1s before entering the cycling interface:

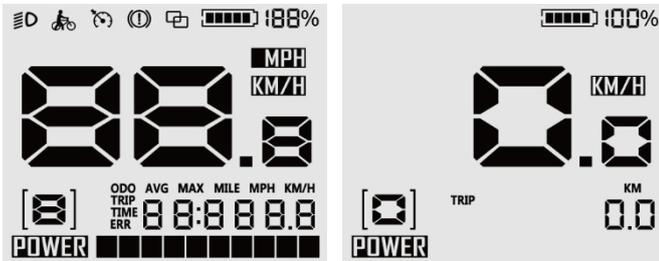


In any working mode, press and hold **Power** to power off.

★Cycling Interface

The riding interface supports multiple parameters display:

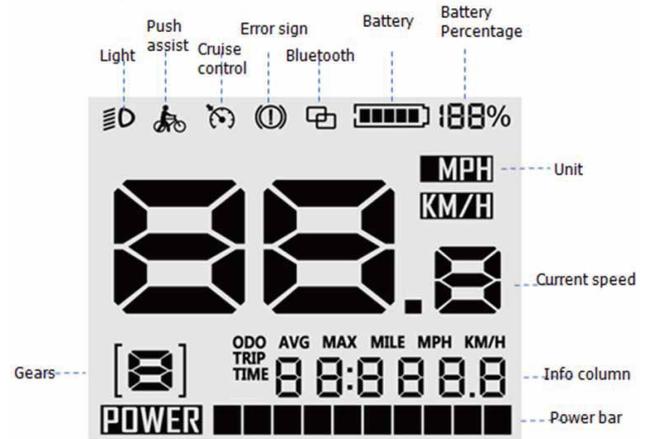


★ The Info column can be switched by the **Power**:

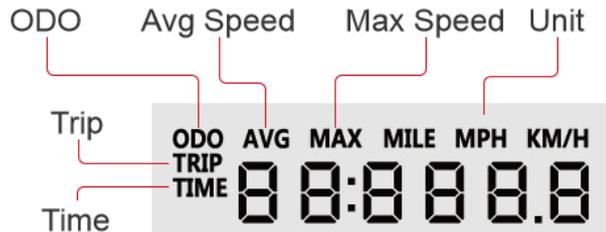

★ Gears Shift

Click on +/- button to shift gear;

Press and hold - for 2s to start 6km/h push assist mode and release - to exit.

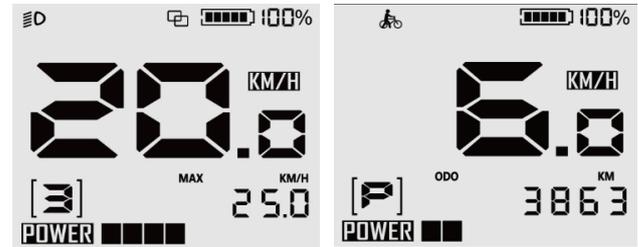


★ Light turns on/off

Press and hold + for 2s to turn on/off the light.


★ Clear Trip Distance

Press and hold **Power** and **+** together to clear the trip distance:

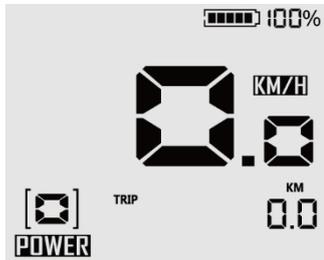

Note: Maximum speed, average speed, total travel time and calories can be saved.

★ Error Display

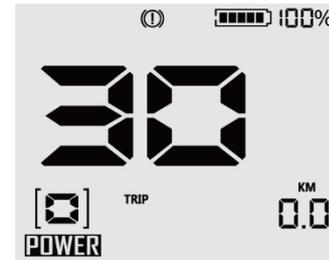

Common Error Codes:

Error Code (hexadecimal)	Meaning
21	Overcurrent or MOS broken
22	Throttle Error
23	Motor Phase Error
24	Motor Hall Error
25	Brake Error
26	Low Voltage Warning
30	Communication Error

Lithium Battery No.2 Protocol Error Code:

Error Code (hexadecimal)	Meaning
02	Brake Error
06	Low Voltage Warning
07	Motor Phase Error
08	Throttle Error
09	Overcurrent or MOS broken
14	Motor Hall Error
30	Communication Error

User Menu

★ Press and hold + and - for 1s together to enter the user menu interface. The data unit, auto power-off time and backlight brightness can be set up.

If there is no operation for 60s, it will return to the Cycling interface automatically.


1. Unit

In this mode, the speed unit will be flashing. Click - / + to change the unit and click **Power** to confirm and switch over to the next menu.



2. Auto Power-off Time

★ In this mode, the data of auto-power-off time (in minute) will be flashing, click - / + to adjust it in the range of 0-99(0 means no auto-power-of). Click **Power** to save and switch over to the next menu.

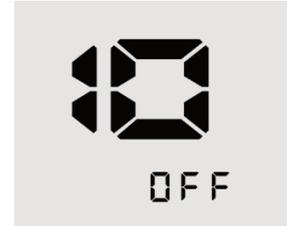

3、 Backlight Brightness

In this mode, the data of backlight brightness will be flashing, click - / + to adjust it in the range of 1-5.
Click **Power** to save and switch over to the next menu.



Attentions

1. Please make sure to turn off the power before the device is connected, otherwise it causes device damaged permanently;
2. Please make sure to fix the inner hexagon screws with maximum torsion value less than 1Nm, otherwise it causes device damaged;
3. The device is not permitted to soak in water;
4. Please use soft wet cloth to wipe the surface and clean the device, DO NOT use or spray any chemical liquid;
5. The USB port of display is NOT waterproof. Please ensure the protective rubber plug is tucked tightly during riding in the rain. It's forbidden to connect external devices in the rain;

BATTERY CHARGING TIPS

- ★ The battery should be recharged after each use. You can charge the battery after short rides even if the battery is not empty without damage.
- ★ Do not cover up the battery when plugged in or charging. Provide an open space with air circulation. Do not charge with the charger upside down which can inhibit cooling and reduce the battery life.
- ★ Check the cables, charger, and battery for damage before beginning each charge.



Notice

Charger will charge the completed battery within 5.5 to 6.5 hours. Connect the battery first, then connect the power supply and make sure the red LED of the charger is lit. A red light indicates that the battery is charging. A green light indicates that the battery is fully charged.

Always charge your battery in temperatures between 41 and 113 Fahrenheit and ensure the battery and charger are not damaged before initiating charge. If you notice anything unusual while charging, please discontinue charging and use the bike and contact QRONGE Ebike for help.

When the Battery Is Removed

- ◆ Be careful not to drop or damage the battery pack.

Charger Safety Precautions

- Keep the charger in a safe place away from children.
- Fully charge the battery before each use. This can extend the life of the battery and reduce the chance of over-discharging the battery pack.
- Do not charge the battery with any other chargers that are not purchased directly from QRONGE.
- The charger is compatible with 110/220V 50/60 Hz standard home AC power outlets.
- Avoid contact with liquids, dirt/debris, or metal objects.
- Do not yank or pull on the cables of the charger. When unplugging, carefully remove both the AC and DC cables by pulling on the plastic plugs.
- If you notice a strange smell or the charger/battery is overheating. Please stop charging immediately and contact QRONGE Ebike customer service.



Please take special care charging your QRONGE Ebike by following the above procedures and safety information. Failure to follow the proper charging procedures can result in damage to your QRONGE Ebike, charger, personal property, and serious injuries or death.

Battery/Charger Care

If the battery will not be used for an extended period, charge the battery fully and recharge it every 2 months.

Store in a cool, dry place.
Recharge the battery after every use.

Do not:

- Use it to power other electrical devices. Improper use will damage the battery and shorten its life and may cause fire or explosion.
- Disassemble or alter the battery or battery charger.
- Place the battery near fire or corrosive substances.
- Allow any liquids on or inside the battery/charger.
- Expose the battery/charger to extreme weather conditions.
- Operate the battery/charger if damaged. Re-charge the battery only with the charger specified by the QRONGE .
- Use the battery/charger for any use other than its intended purpose.

EXTENDING RANGE AND BATTERY LIFE



It is recommended that users pay close attention and ride within the following limitations to ensure the hub motor does not overheat or become damaged from excessive loading.

- *Pedal can assist the motor when climbing hills and accelerating from a stop.
- *Avoid sudden starts and stops.
- *Accelerate slowly.

If you experience unusual sounds or odors coming from the charger or the battery, unplug the charger immediately and contact QRONGE customer service.



Ebike Care Guide

To ensure safe riding conditions you must ensure your Ebike is properly maintained. For your safety, follow these basic guidelines and see your certified Ebike mechanic regularly.

1. Properly maintain batteries by keeping them fully charged when not in use.
2. Never immerse the bike or any components in water because this action may damage the electrical system.
3. Periodically check wiring and connectors to ensure there are no damages and the connectors are secure.
4. Clean and wipe the frame with a damp cloth soaked in a mild non-corrosive detergent mixture and dry with a cloth.
5. Store under shelter; avoid leaving the bike in the rain or exposed to corrosive materials. If you leave the bike in a wet condition, dry your bicycle afterward and apply anti-rust treatment to the chain and other unpainted steel surfaces.
6. Riding on the beach or coastal areas may expose your bicycle to corrosive salt. Wash your bicycle frequently, and wipe or spray all unpainted parts with anti-rust treatment.
7. If the hub or bottom bracket bearings have submerged in water, they should be taken out and re-greased to prevent deterioration.
8. If the paint has become scratched or chipped on any metal, use touch-up paint to prevent rust. Clear nail polish can also be used as a preventative measure.
9. Regularly clean and lubricate all moving parts, tighten components and adjust as required.
10. Damage from corrosion is not covered under warranty, give your bike special care to prevent corrosion and extend its product life.



Safety Checklist

NOTICE: it is important to carry out the following checks before riding.



COMPONENT OR CONDITION	INSPECT BEFORE EVERY RIDE	INSPECT PERIODICALLY*	CLEAN AND/OR LUBRICATE	ADJUST/TIGHTEN	REPAIR/REPLACE IF NECESSARY
The pressure(25-30PSI)	✓			✓	
Tire wear/damage	✓			✓	
Brake pad adjustment	✓			✓	
Wheel quick release adjustment	✓				✓
Head and tail lights	✓				✓
Controls and displays	✓				
Seat post quick release adjustment	✓			✓	
Brake pad wear		✓			✓
Brake cable tension/wear		✓		✓	✓
Spoke tension		✓		✓	
Wheel truing		✓		✓	
Hub bearings		✓	✓	✓	
Chain lubrication		✓	✓		
Derailleur adjustment		✓	✓	✓	
Reflectors		✓			✓
Battery and charger		✓			✓
Headset adjustment		✓	✓	✓	
Bottom bracket adjustment		✓	✓	✓	
All bolts, nuts & mounting hardware		✓		✓	✓

* Every 5 to 10 rides depending on length and conditions of ride.



Troubleshooting

If your QRONGE E-Bike is not working, check the connecting cables(near the handlebar) to make sure they are not loose or unplugged.





Disclaimer

At QRONGE, we take our customer's safety very seriously and will always advise that you carefully follow local, state, and federal laws before making a purchase with us.

- QRONGE has great capabilities and will grow with the skills of the rider to higher levels. We ask all users who of QRONGE to please be careful at all times and be responsible for the safety of themselves and others.
 - Some counties, states, towns & cities have different laws/regulations, please check with your local authorities and abide all speeds/power restriction laws when commuting on roads or places specific to limitations that are stated, e.g. parks, tracks, trails, or private areas of residence.
 - Children under 16 years of age should always be supervised by an adult. QRONGE should never be ridden by anyone under the recommended age limit.
 - Always wear a helmet, elbow and knee-pads. We recom-mend that you never ride with sandals or barefoot, and have athletic shoes when riding QRONGE.
-
- Before every ride, check and secure all fasteners and wheels for wear and tear. Replace worn or broken parts immediately.
 - Please be sensible with serious consideration and that no injury, harm, or loss is caused in any regard. We advise abasic insurance policy be obtained for riders and to speak with your local authorities before riding on roads.
 - QRONGE. holds no responsibility for the actions of others once your Ebike is delivered. The result of your actions depend solely on the purchaser and the way you conduct your responsibilities. If you require any further information we are happy to advise to the best of our knowledge.

Components of the QRONGE Ebike are subject to higher wear when compared to bicycles without power assistance. This is because the QRONGE Ebike travel at higher speeds than regular bicycles with a greater weight. Higher wear is not a defect in the product and is not subject to warranty.



Notice

Once the service life of any component is exceeded, it may cause an unexpected loss of function. This can lead to serious injuries or even death. Therefore, please pay attention to wear characteristics, such as cracks, scratches, or changes in component color or operation, which may indicate that the service life has been exceeded. Worn parts should be replaced immediately.

Thanks for Riding QRONGE Ebike!



WWW.QRONGE.COM

